



Commit today, improve the environment!

Recycling empty cartridges helps eliminate non-biodegradable plastics and metals contained in printer cartridges from entering our landfills. Visit your local e-waste recycling center for details.

Remanufactured Inkjet Cartridge

Installation Instructions

Troubleshooting Guide

Printing Tips

Storage Instructions

Store cartridge away from direct sunlight, high humidity and extreme temperatures below 22 F (-5C) or above 104 F (40C).

Note: Cap color of cartridges can vary.

Installation Instructions

Remove the new cartridge from its packaging and hold upright.



- 1 Pull plastic protective clip and remove gently.
- 2 Pull the tape out carefully without touching the copper circuit.
- 3 Turn the cartridge so the copper circuit is facing the rear of the printer. Tilt the cartridge gently and push it in place. Lower the latch to lock the cartridge into place.


! Looking for Printing Tips or the Troubleshooting Guide?

Troubleshooting Guide

Why is my printer warning me that this new cartridge is low on ink or empty?

Depending on your version of printer software, your printer can fail to detect the correct ink levels of your remanufactured cartridges and will warn you that it is either low or empty when they are actually full. These pop up warnings can and should be disregarded.

Use the following guide to walk you through the warning messages and begin enjoying your new cartridge.

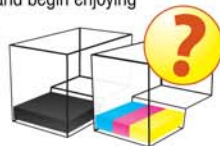

Follow through the screen prompts

Using either the **OK** button on your printer or from the pop up message work your way through the series of dialog boxes.

To prevent any further messages; look for and **CHECK** the box that says:

"Don't display this dialog again"



Printing Tips

After Installation: If Cartridge Does Not Print

- Run print cartridge cleaning service from your printer's diagnostic tools
- If ink is still not flowing take a damp paper towel
- Firmly press against print head of cartridge for 5 seconds. *(ink will penetrate through towel, protect hands, clothing, etc.)*
- Re-install into your printer and run a print test

Note: Inkjet cartridges start drying out once it is opened. So try printing a couple of pages at least once a week to keep ink nozzles clean and the ink flowing.

Recommended Print Resolution:

- Printers are installed and automatically default to a "draft" or "normal" printing quality mode
- For the most vibrant and greater display of color, change the setting of your print quality from the default to "Best", "Photo" or the highest resolution setting your printer allows.
- Use a good quality paper for you high resolution printing needs

Note: The higher the resolution (sharpest image and best color), the slower the printer speed will be (more ink consumed). Please balance quality with speed.

***Note:** All inkjet cartridge brand names, trademarks, logos, and images are the property of their respective holder. The use of such trademarks is for descriptive and compatibility purposes only. This inkjet cartridge has been professionally remanufactured by an independent remanufacturer and has no affiliation to and is not sponsored by the original inkjet cartridge manufacturer.