

| | |
|--|--|
| CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING | <p>Install cartridge. Start print. After first message appears, click OK to continue. Printer will start printing. If second message comes up and printer's LCD shows error code "E" do not click cancel printing. Press and hold down printer "Stop/Reset" button at least 5 seconds or more. Printer will start printing.</p> <p>CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING</p> |
| CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING | <p>Install cartridge. Start print. After first message appears, click OK to continue. Printer will start printing. If second message comes up and printer's LCD shows error code "E" do not click cancel printing. Press and hold down printer "Stop/Reset" button at least 5 seconds or more. Printer will start printing.</p> <p>CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING</p> |
| CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING | <p>Install cartridge. Start print. After first message appears, click OK to continue. Printer will start printing. If second message comes up and printer's LCD shows error code "E" do not click cancel printing. Press and hold down printer "Stop/Reset" button at least 5 seconds or more. Printer will start printing.</p> <p>CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING</p> |
| CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING | <p>Install cartridge. Start print. After first message appears, click OK to continue. Printer will start printing. If second message comes up and printer's LCD shows error code "E" do not click cancel printing. Press and hold down printer "Stop/Reset" button at least 5 seconds or more. Printer will start printing.</p> <p>CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING</p> |
| CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING | <p>Install cartridge. Start print. After first message appears, click OK to continue. Printer will start printing. If second message comes up and printer's LCD shows error code "E" do not click cancel printing. Press and hold down printer "Stop/Reset" button at least 5 seconds or more. Printer will start printing.</p> <p>CANON 240, 240XL, 241, 241XL, 240XXL START-UP CARTRIDGE TROUBLESHOOTING</p> |